


Video Instructions: <http://www.dqinlit.com/mat/video.mp4>

When you got the pet mat, please roll it out on the ground or a sofa, wait about 10 minutes (**important**), then go ahead to use it.

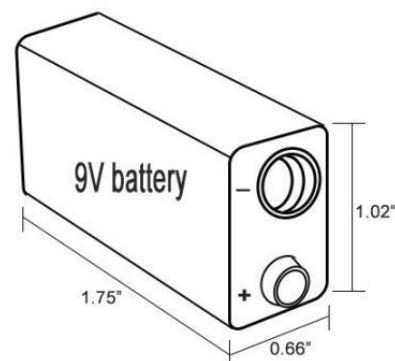

1. How to install the battery?

Remove the battery cover, connect the +/- electrodes of a new 9V alkaline battery to the battery clamp, put the battery in it. Press the battery cover on the battery, and slide it to install the cover.

2. How to turn it on? Short press the Action Button, the LED indicator would light up.

3. How to switch the work mode?

After you turn the mat on, wait 1 minute, then short press the Action Button to switch the work mode.

TONE: sound alarm + very very low electric shock, it is very safe that you can check the mat with your hand.

TONE+STATIC: sound alarm + normal electric shock

STATIC: normal electric shock only, no sound

4. How to turn it off? Long press the Action/Button about 4 seconds, and release it until the LOW BAT light flash some times quickly. If you hold the button too long, it would be turned on again.

5. How to reset the pet mat?

Turn off the pet mat, roll out the pet mat on a sofa or a table, remove the battery from the pet mat, then wait about 10 minutes to discharge all power and static. If the pet mat is abnormal, please try to reset it and then check it again.

6. How to move the pet mat to another place? Please turn off the mat first (do **NOT** remove the battery directly), move the mat to another place, wait more than 10 minutes (**important**), then turn it on.

Tips:

1. There are two metal wires on the mat (These are visible upon close inspection, separated by about 1 inch), ONLY when your pet paws or skin touching across 2 wires, the mat will work to your pet.

2. Please use a new 9V alkaline battery to check the pet mat.

3. Please roll out the pet mat first, wait about 10 minutes, then turn it on to use. After use, please turn it off first.

* How to check the mat?

1. Roll out the pet mat on the ground or a sofa, wait about 10 minutes.

2. Install a new 9V alkaline battery.

3. Turn on the mat, in the first 1 minute, the mat would calibrate itself, please do NOT touch the mat or press any button.

4. After 1 minute, set the work mode as TONE, put your hand on the mat, you will feel the very very low electric shock, and hear a beep, see the LED indicator flash up. It means the mat works well.

5. If not, please check the mat as the following steps:

5.1 reset the mat first.

5.2 replace the 9V alkaline battery, and install a new alkaline battery, make sure the 9V battery is installed correctly.

5.3 turn on the mat to check it again.

If you have any question in use, please feel free to contact us, thanks

Contact us: support@DQinLit.com

Download this manual: <http://www.DQinLit.com/mat/manual.pdf>